


# STEALTH

---

The Ultimate Fragrance Diffuser

---

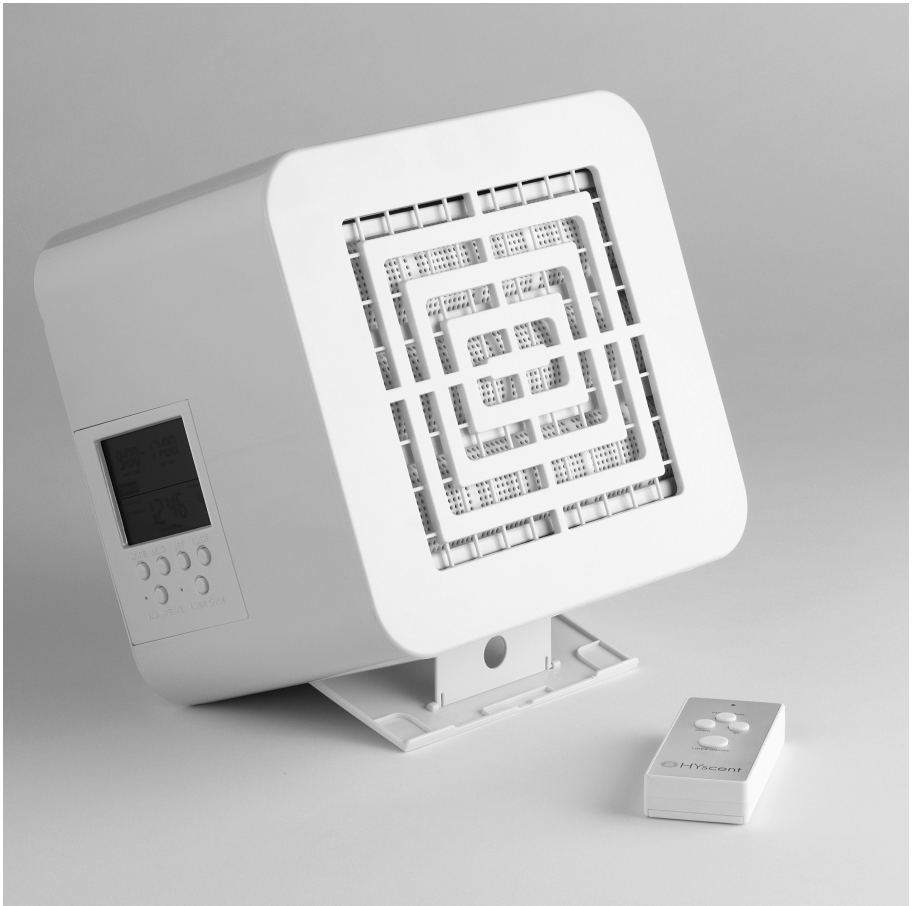

---

# SIMPLE TO SET UP AND EASY TO USE

The HYScent Stealth is the most versatile smart fragrance machine.

## FAN INTERVAL

Select the fragrance **INTENSITY** level: Select either **LOW**, **MEDIUM**, **HIGH** or **CONTINUOUS**.

**LOW:** The fan will operate for 1 minute in a 10 minute repeating cycle. The fragrance will remain in the air providing a consistent low intensity aroma impact according to the programmed settings.

**MEDIUM:** The fan will operate for 2 minutes in an 11 minute repeating cycle. The fragrance will remain in the air providing a consistent medium intensity aroma impact.

**HIGH:** The fan will operate for 2 minutes in a 7 minute repeating cycle. The fragrance will remain in the air providing a consistent high intensity aroma impact.

**CONTINUOUS:** Fan will operate continuously until switched off. Best for manual use in extreme malodorous circumstances.

## FAN SPEED - FRAGRANCE SPREAD

Select from 7 different fan speeds. The higher the speed, the further the fragrance will travel.

To adjust speed, press either the **MORE** or **LESS** buttons.

*HINT: When setting up the Stealth for first use, select HIGH fan speed to fill the area with fragrance quickly. Once area is filled, lower fan speed to sustain fragrance presence and preserve longevity of fragrance refill.*

# TIMER ON OR OFF

Press **TIMER On/Off** button to select function.


**TIMER ON:** The Stealth operates according to the pre-programmed settings.

**TIMER OFF:** The Stealth will operate 24/7 according to the fan interval settings.

**ALL OFF:** The Stealth is OFF.

# REMOTE CONTROL


The Stealth comes with a remote control handset which controls **FAN SPEED** and **FAN INTERVAL** settings. You may also turn the power on or off.

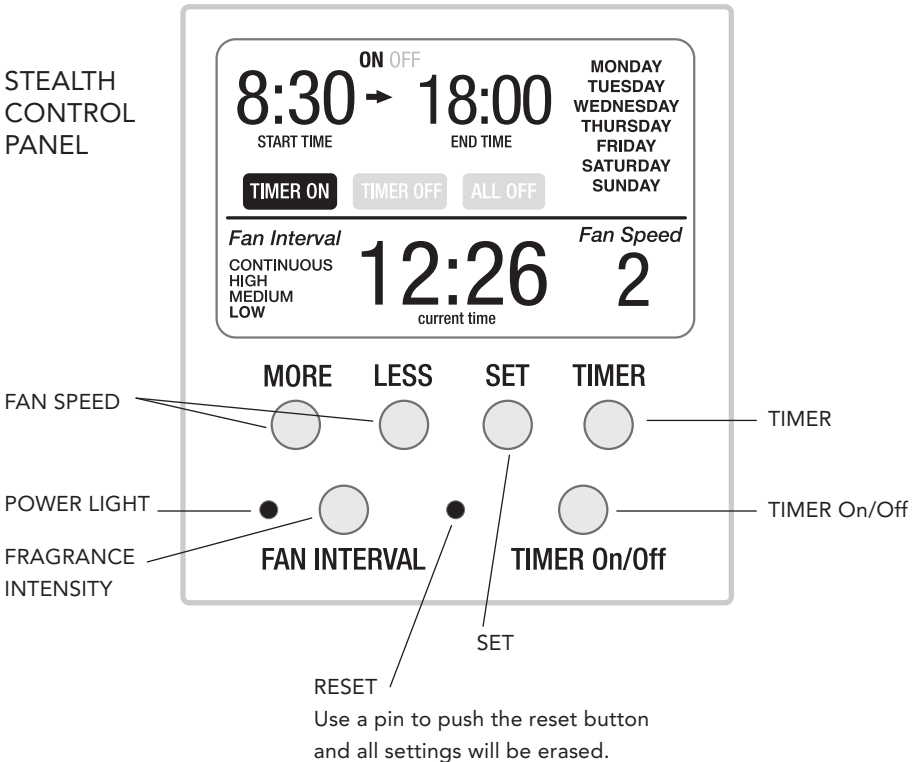

# GETTING STARTED


1. Plug in the Stealth to the wall power outlet.
2. Power light next to **FAN INTERVAL** will illuminate RED.

Power Light

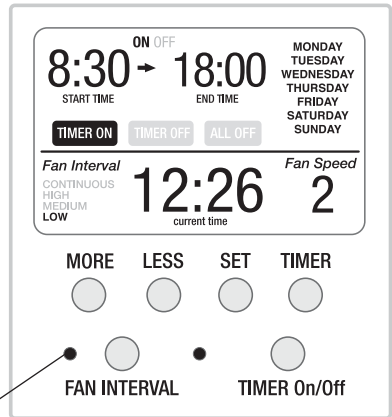

# SET TIME

Press **TIMER On/Off** button once - **TIMER ON** will be highlighted.

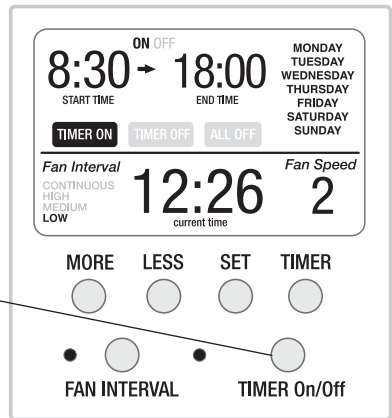


# SET HOUR

Press **SET** button and hold for 3 seconds until hour digit is flashing.

Press **MORE** or **LESS** button to select current hour.

The time is based on a 24 hour schedule (not am/pm).

When correct hour is flashing press **SET**.

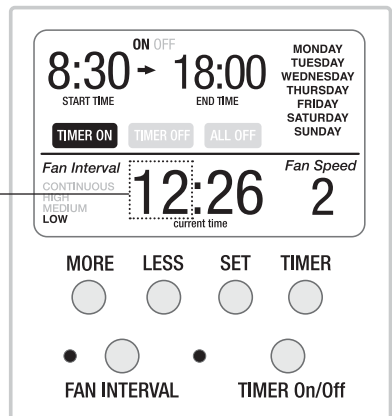


## SET MINUTE

Minutes are now flashing.

Press **MORE** or **LESS** to select current minute.

When correct minute is flashing press **SET**.

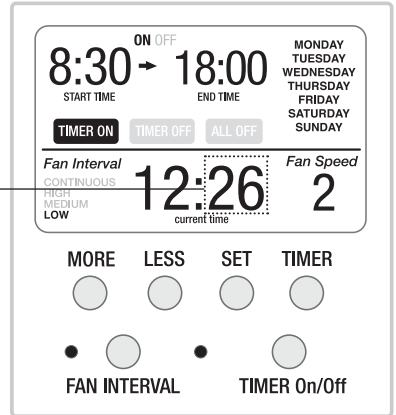

## SET DAY


Sunday is now flashing.

Press **MORE** to set current **DAY**.

When correct day is flashing press **SET** and automatically exit time setting function.

**THE TIME ON YOUR STEALTH IS NOW SET...**

It is 12:26pm on Sunday.

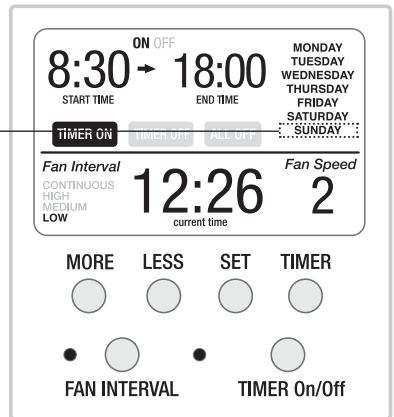


# SET TIMER

## START TIME: SET HOUR

Press **TIMER** button and hold for 3 seconds until **START TIME** hour is flashing.

Press **MORE** or **LESS** button to select desired start hour.

When correct hour is flashing press **TIMER**.

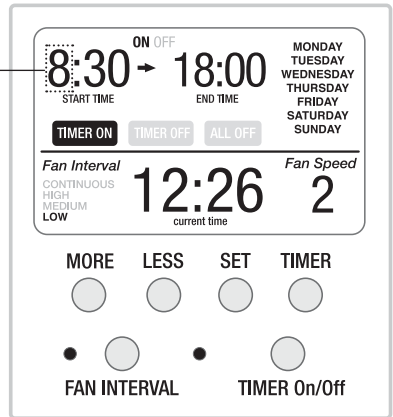


## START TIME: SET MINUTE

**START TIME** minute is flashing.

Press **MORE** or **LESS** button to select desired start minute.

When correct minute is flashing press **TIMER**.

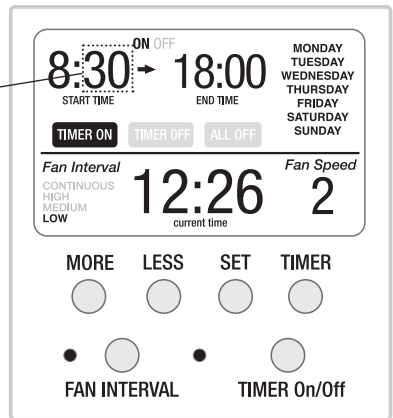


## END TIME: SET HOUR

Hour is flashing.

Press **MORE** or **LESS** button to select desired end hour.

When correct hour is flashing press **TIMER**.

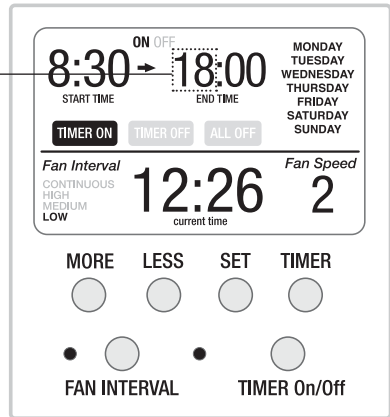


## END TIME: SET MINUTE

Minute is flashing.

Press **MORE** or **LESS** button to select desired end time minute.

When correct minute is flashing press **TIMER**.

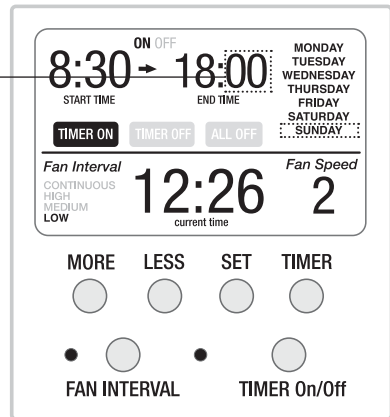


## DAYS OF OPERATION:

**ON** is flashing. **SUNDAY** is illuminated.

Press **LESS** to toggle between **ON** and **OFF**.


If **ON** is required, when **ON** is flashing press **TIMER**. The Stealth **will** operate on **SUNDAY**.

If **OFF** is required, when **OFF** is flashing press **TIMER**. The Stealth **will not** operate on the selected day.

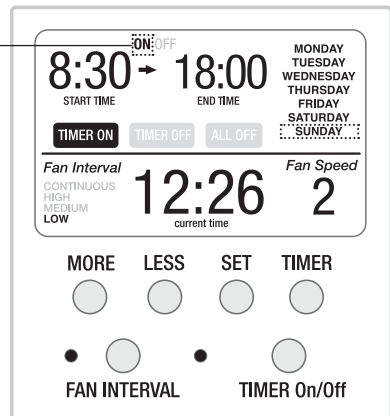

**REPEAT PROCESS TO SET  
ALL DAYS OR SELECT DAYS.**

# EXAMPLE 1.

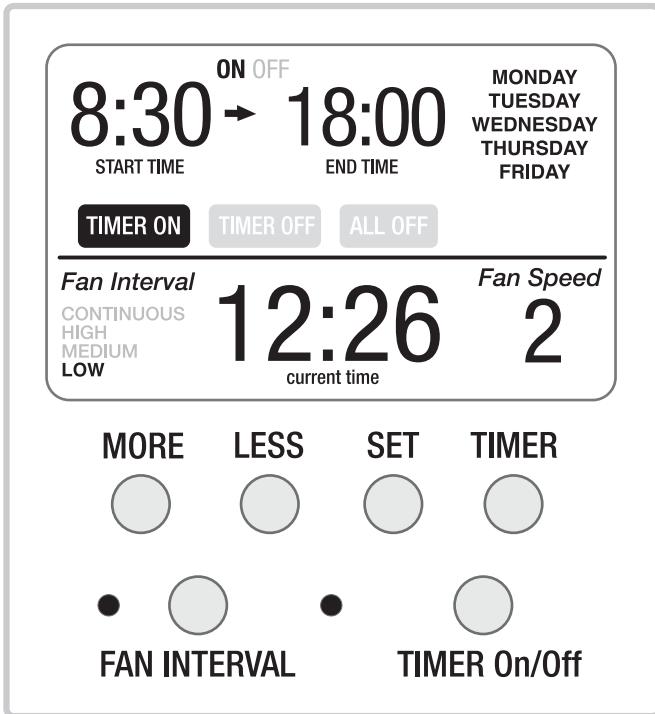


In the above example:

THE STEALTH IS SET TO  
AUTOMATICALLY RUN **MONDAY  
THRU FRIDAY** FROM 8:30 TO 18:00  
(8.30AM TO 6.00PM) ON FAN  
INTERVAL **LOW** AND FAN SPEED **2**.

An internal battery ensures time is stored when Stealth is unplugged.



## EXAMPLE 2.

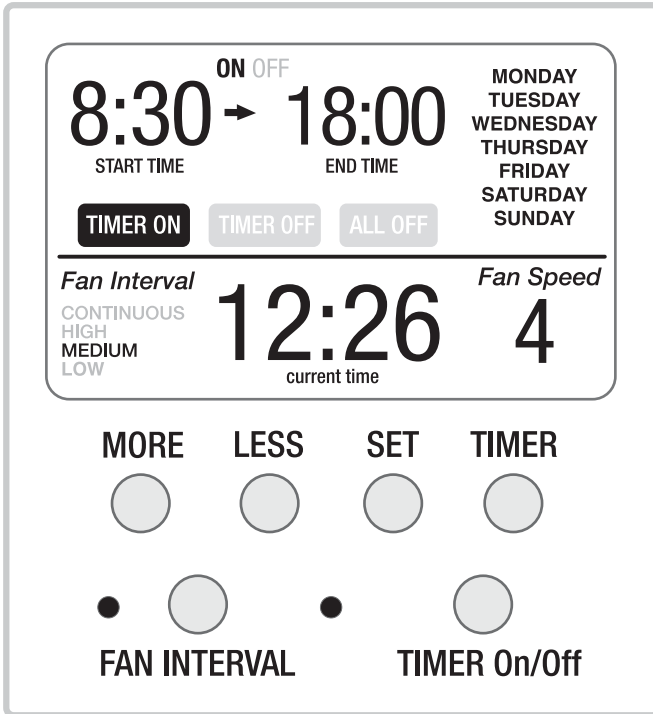

In the above example:

THE STEALTH IS SET TO AUTOMATICALLY RUN **EVERY DAY** FROM 8:30 TO 18:00 (8.30AM TO 6.00PM) ON FAN INTERVAL **MEDIUM** AND FAN SPEED **4**.

An internal battery ensures time is stored when Stealth is unplugged.

---

# INSTALLING STEALTH REFILLS

The Stealth has a unique Multiple Cartridge loading bay.

The number of refills used will determine: the size of space to be fragranced; the intensity of the fragrance; the longevity of the fragrance.

## FRAGRANCE BLENDING

Mix complementary fragrances to create your own special fragrance blend.




# STEALTH WALL MOUNT

## TO INSTALL ON A WALL:

1. Locate position on wall for Stealth installation.
2. Screw wall mount into wall using the 2 wall mounting screws provided.


## ONCE SECURED ONTO WALL

3. Screw Stealth mounting screw into base of Stealth until Stealth is securely held in place. Do not overtighten the Stealth mounting screw.

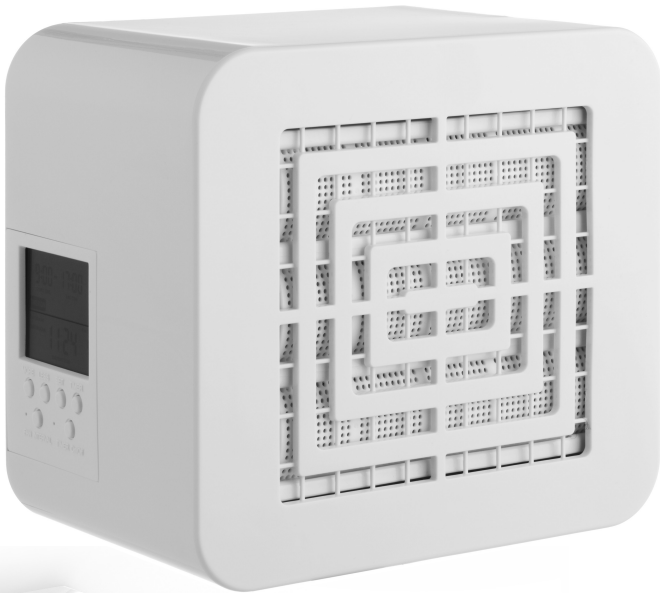

# STEALTH

---

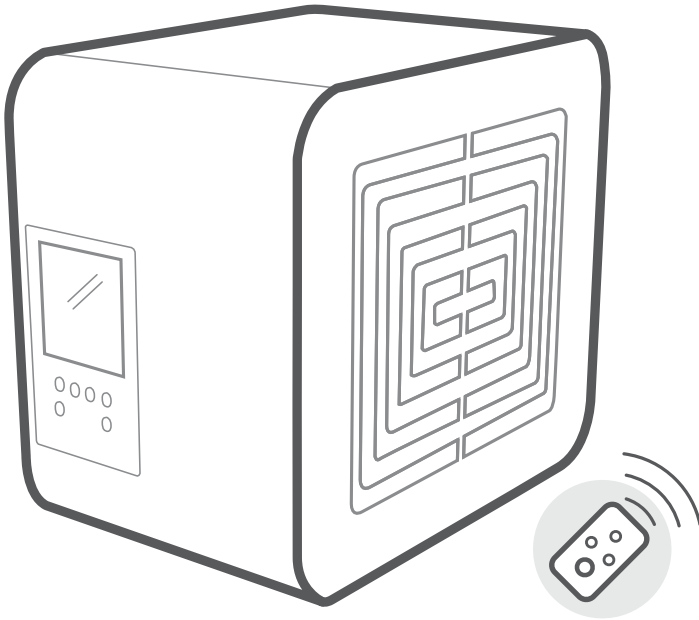

**Made in the USA**

**Phone:** +1.201.635.9555 **Fax:** +1.866.682.8078

**HYSO LLC, 746 Gotham Parkway, Carlstadt, NJ 07072**  
**sales@hyso.com hyscent.com**

---